



HomeComm



REMOTE
Model No: 01110




works with the
Google Assistant



Download on the
App Store



GET IT ON
Google Play

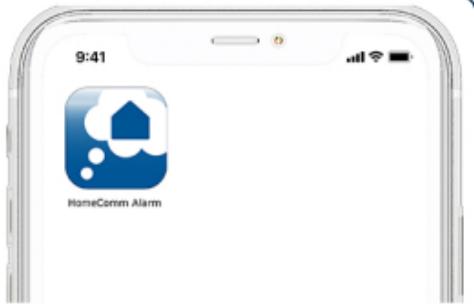

HomeComm Alarm

Fig. 1 App

- 1) A simple outline of a padlock.
- 2) A simple outline of a padlock.
- 3) A house outline with a small human figure inside.
- 4) A speaker icon with two curved lines indicating sound.

Fig. 2 Functions

EN - English

Remote for HomeComm Security System. The remote sends and receives with built-in encryption for good security. Vibration is used to confirm operation. Requires HUB and App from Home-Comm

1. Download the free HomeComm App, see fig. 1. More info can be found on www.homecomm.de
2. Follow instructions in the App
3. Use the App to test the functionality

The remote has 4 operations se fig. 2:

- 1) Arm (activate alarm/ alarm on)
- 2) Disarm(disconnect/alarm off)
- 3) Home Arm (activate home mode)
- 4) Panic (SOS). Activation time 1,5 seconds

CAUTION!

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to your local environment policy.

DE - Deutsch

Fernbedienung für das HomeComm Sicherheitssystem. Die Fernbedienung sendet und empfängt mit integrierter Verschlüsselung für eine gute Sicherheit. Vibration wird verwendet, um den Betrieb zu bestätigen. Benötigt HUB und App von HomeComm

1. Laden Sie die kostenlose Home-Comm App herunter, siehe Abb 1. Weitere Informationen finden Sie auf www.homecomm.de

2. Befolgen Sie die Anweisungen in der App

3. Testen Sie die Funktionalität mit der App

Die Fernbedienung verfügt über 4 Funktionen, siehe Abb. 2:

- 1) Arm (Alarm aktivieren / Alarm ein)
- 2) Ausschalten (Unschärfe/ Alarm aus)
- 3) Home Arm (Home-Modus aktivieren)
- 4) Panik (SOS). Aktivierungszeit 1,5 sekunden

VORSICHT!

*Explosionsgefahr, wenn die Batterie durch einen falschen Typ ersetzt wird
Entsorgen Sie gebrauchte Batterien gemäß Ihrer örtlichen Umweltrichtlinie.*

DA - Dansk

Fjernbetjening til HomeComm alarmsystemet. Fjernbetjeningen sender og modtager krypteret for fuld sikkerhed. Vi brerer når alarmen aktiveres. Vær opmærksom på at der kræves HUB og App fra HomeCo

1. Download den gratis HomeComm App, se fig. 1. Mere info findes på www.homecomm.de
2. Følg instruktioner i App
3. Brug App til at teste funktionaliteten

Fjernbetjeningen har 4 funktioner (se fig. 2):

- 1) Aktivér alarm (alarm til)
- 2) Deaktivér alarm (alarm fra)
- 3) Skalsikring (aktivér hjemme)
- 4) Panik (SOS). Aktiveringstid 1,5 sekund

Vær opmærksom på!

Eksplusionsfare, hvis batteriet udskiftes med en forkert type. Bortskaf brugte batterier i henhold til din lokale miljøpolitik.



CR2032 3.0V, Coin cell battery



868.65 MHz, Max. Power 10mW



36 mm x 68 mm x 16 mm



For indoor use only



EU declaration of conformity:
www.homecomm.de/downloads

© 2020 HomeComm UG
Leostraße 31
40545 Düsseldorf
Deutschland
www.homecomm.de

Google Assistant, Google Assistant Logo, Google Play and the Google Play logo are trademarks of Google LLC. App Store is a trademark of Apple Inc.